


# SAKK® MAT Parapet Roof Cover Installation and Operating Instructions

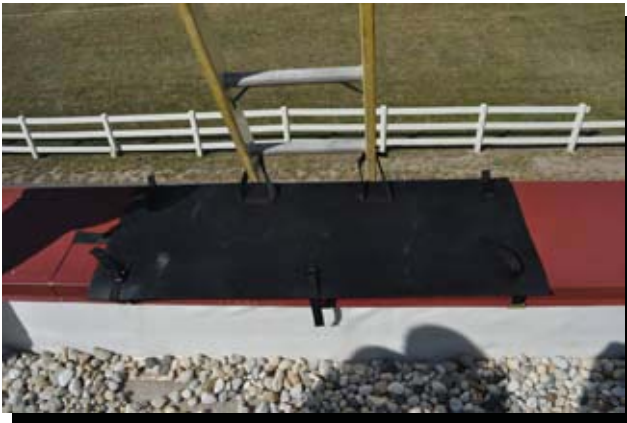

The **SAKK® MAT** is to be installed as follows:

1. The mat should lay flat on the metal parapet cap.
2. The side with the three adjustable hold down hooks is the roof side. The side with the two adjustable hold down hooks is the exterior wall side.
3. The hooks are attached to the edges of the parapet cap as follows. The j-hook is installed under the lip of the metal parapet cap and adjusted to length via the cam buckle.
4. The **SAKK® MAT** should then be anchored to the parapet cap.

**(IMPORTANT: Do not over tighten the hooks to the cap, as this can cause damage to the mat. If the flat portion of the mat becomes distorted, this is an indication that the straps are too tight.)**

5. The male/female buckle assembly is then wrapped around the ladder rises to hold the extension ladder in place.
6. If the extension ladder is to be used the next day at the same location, disconnect the male/female buckle assembly and leave the mat in place for the next day.